

WELD PROTECTION FILM / HDPE + LLDPE

Kontain EdgeProtect™

Less cleaning. More time welding.

Keep the mating weld faces protected during handling and deployment. Peel the film away immediately before welding to expose the protected liner surface.



Peel immediately before seam preparation and welding. Illustrative site scene; film shown blue for clarity. Colour and appearance may vary.

LESS SEAM CLEANING

Helps keep dust and loose debris off the weld zone, reducing repeated wiping before welding.

PROTECTION IN PLACE

Covers the surfaces that will form the seam while the rolls are handled, unrolled and positioned.

EASY SITE REMOVAL

Thin film peels away by hand. Remove it from both mating faces before the welder reaches the seam.


STANDARD ON EVERY ROLL

SpecLinerHD / GM13 HDPE • SpecLinerLLD / GM17 LLDPE


Protect both mating faces.

Upper face on one long edge. Underside on the opposite long edge.

01 ONE ROLL: SECTION ACROSS THE WIDTH

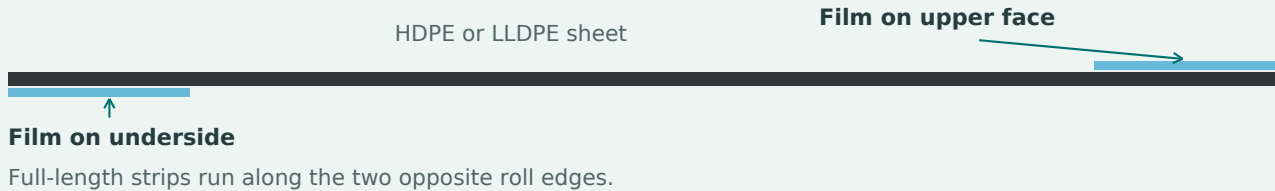

02 TWO PANELS: MATING FACES AT THE OVERLAP

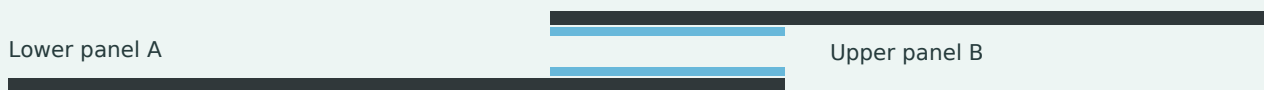

Remove BOTH films before welding

Schematics only; not to scale. Gap and film thickness are exaggerated. Confirm strip width and weld overlap for the supplied liner and welding equipment.

ON SITE

- 1 Deploy and align**
 Keep both strips in place. Position the panels so the protected faces meet at the overlap.
- 2 Peel both strips**
 Remove the upper-face and underside films just ahead of welding. Collect the used film as you go.
- 3 Inspect, then weld**
 Check for clean, dry, residue-free faces. Complete final preparation and weld under the qualified procedure.



Lift the overlap to reach the underside film. Both mating faces need to be uncovered. Illustrative site scene; film shown blue.

EASY REMOVAL. CLEAN RELEASE.

Peel away EdgeProtect™ immediately before welding. No residue left behind after removal. The protected liner faces are exposed for inspection and final seam preparation.

Remove both films completely. Check that the surfaces are clean and dry, then complete trial welds and seam testing in accordance with the project requirements.

Cut edges, roll ends and repairs need normal seam preparation. Keep the exposed weld zone protected from recontamination. Site conditions and the project installation procedure govern the work.

Talk to Kontain about EdgeProtect™ for your next liner package.